

Alternative Bodies (Connections) and Mounting

For specific application details, please contact BEX.

TOP-CONNECT BODY



2JTPL - 1/4" Top-Connect JPL Body
Air (gas) and liquid inlets are both on top of this body, 90° from the nozzle outlet.

BACK-CONNECT BODY



2JBPL - 1/4" Back-Connect JPL Body
Air (gas) and liquid inlets are on back of this body, 180° from the nozzle outlet.

THICK WALL MOUNT




JPLM -
Wall adapter replaces the cap retaining ring with a 3/4" MNPT adapter which allows mounting any JPL assembly to a thick wall (over 3/8" thick).

THIN WALL MOUNT



JPLN -
Thin wall adaptation, simply add a PLMN locking nut and PLMG o-ring to the JPLM thick wall adapter, and you can mount any JPL assembly to a wall less than 3/8" thick.

(1-1/16" clearance hole required)

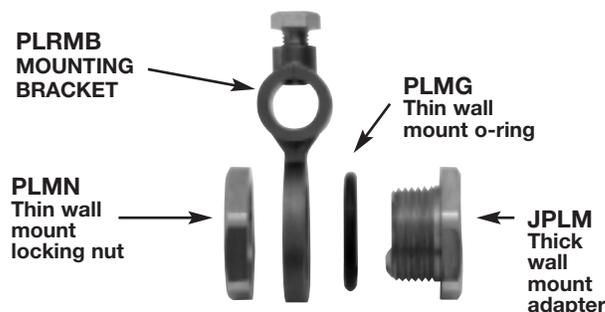

PLRMB -
The rod mounting bracket allows for any air atomizing body to be mounted to a 1/2" diameter steel rod. Simply use the hardware from the thin wall mount (JPLN).